

[Software name] Touch panel driver2

[System requirements]

Mac OS X 10.11 / macOS 10.12

※This software is not available in the Classic Environment.

[Introduction of software]

This software is designed to be connected with the SHARP touch display to enable touch panel operation via Mac OS.

[Requirement of use]

This touch panel driver is only compatible with the following SHARP touch displays.

- SHARP PN-L803C/PN-L703W/PN-L703A/PN-L703B/PN-L603W/PN-L603A/PN-L603B
PN-C703B/PN-C603D/PN-L401C/PN-C805B/PN-C705B/PN-C605B
PN-80TC3/PN-70TW3/PN-70TA3/PN-70TB3/PN-60TW3/PN-60TA3/PN-60TB3/PN-70SC3
PN-40TC1/PN-80SC5/PN-70SC5/PN-60SC5/PN-65SC1

* Touch drivers will not work properly if used with other Sharp touch displays.

[Note]

- If a delay is noted when drawing a line or object onscreen, or it is difficult to move the splitter of the window up and down or right and left, please use the following settings for improvement.
 - [1] Click "System Preferences" from the Apple menu.
 - [2] Click "Sharp TouchPanel2", and select "Properties."
 - [3] Click "Secondary click" tab.
 - [4] Un-check "Enable press and hold for secondary click", or shorten "Press and hold effective range".

[Restrictions]

- The SHARP touch display and 1 additional display is the current max allowed to be connected with a Mac computer. Both displays can be used simultaneously.
 - "Ink" located under System Preferences is not available with this touch panel driver.
 - The following touch gestures listed below in [1] thru [4] may switch off other touch gestures functions. Suggestions are provided to use switched off touch gestures.
 - [1] When the checkbox for "Spread with thumb and three fingers (show desktop)" is set to 'off', you cannot use the touch gesture function to (close Launchpad).
To (close Launchpad), you can tap any area of the screen besides the icon.
 - [2] When the checkbox for "Pinch with thumb and three fingers (open Launchpad)" is set to 'off', you cannot use the touch gesture function to (close the desktop).
To (close the desktop), you can tap the transparent area in the edge of the screen.
 - [3] When the checkbox for "Swipe down with three or four fingers (display App Exposé)" is set to 'off', you cannot use the touch gesture function to (close Mission Control).
To (close Mission Control), you can use the "swipe up with three or four fingers" touch gesture again, or you can tap the screen.
- * macOS 10.12 is not supported.

[4] When the checkbox for “Swipe up with three or four fingers (display Mission Control)” is set to ‘off’ , you cannot use the touch gesture function to (close App Exposé). To (close App Exposé), you can use the “swipe down with three or four fingers” touch gesture again, or you can tap the screen.
* macOS 10.12 is not supported.

- In order to wake up from the sleep mode with tap operation on the touch display, tap the screen several times.
- Do not touch the touch panel when booting the computer or connecting the USB cable. If you touch the touch panel, it will lead to a malfunction. In this case, disconnect and then reconnect the USB cable.
- Double-click range setting menu is disabled on macOS 10.12.
- In case of PN-L401C and PN-40TC1, set the eraser function of touch display to “OFF” .
- The initial value of “Enable press and hold for secondary click” was changed to “OFF” .

=====

- * Apple, Mac, Mac OS are trademarks of Apple Inc, which are registered in United States and other countries.
- * Other company names and product names are trademarks or registered trademarks of respective companies which are registered in each country.